


RTP-3 / RTP-4 pH/ORP Pre-Amp Installation Diagrams

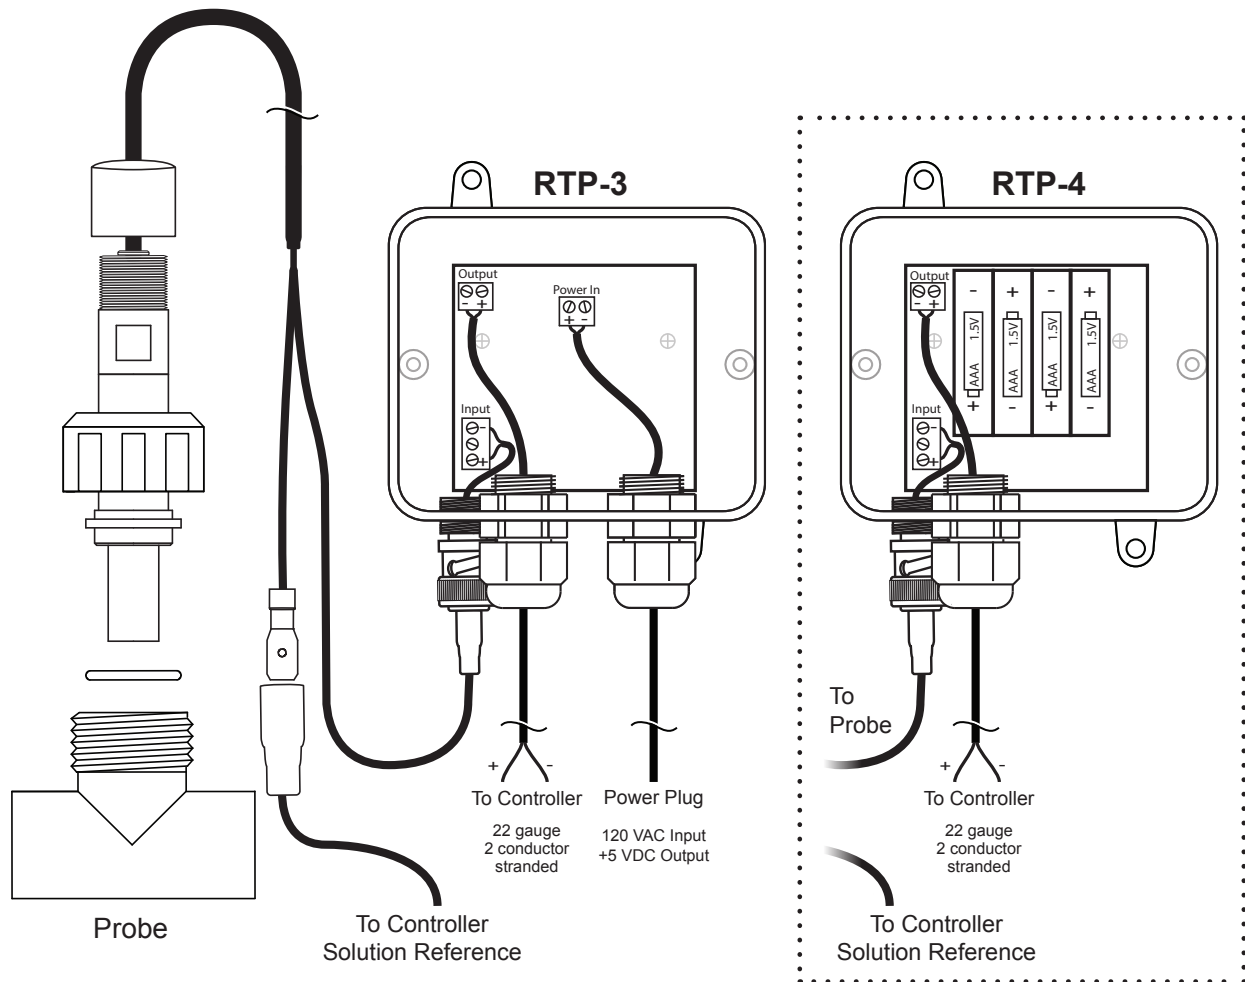

Pre-amps are supplied with both a BNC or two-conductor wire cable to connect between pre-amp and controller. The two-conductor cable can be ran directly to the pH input on the controller board. The BNC connector requires a special extension cable.

Extension cables available:
PH-EXT-10
PH-EXT-50
PH-EXT-100

07/2015