

## Percent Timer Setup

**Step 1:**

Push the **SET UP RUN** button to get this screen. From here push **TIMERS** (Button 3) to go to the next screen.

```

>HOME SETUP<
SETPOINTS          DATE/TIME
CALIBRATION        CONFIGURE
TIMERS             HISTORY
CUSTOMIZE          WATER METER
ALARMS             RELAYS
    
```

**Step 5:**

Set % of Bleed by using the number keys. Press **ENTER** to accept and continue and **HOME** to finish. The % of Bleed, Limit Time, and Source can be changed with similar steps.

```

>TIMER 3 CHANGE<
PERCENT OF SOURCE (050%)
[ _ ] %
USE NUMBER KEYS TO CHANGE, PRESS
ENTER TO ACCEPT, BACK TO ERASE
    
```

**Step 2:**

This is the Timers Setup Screen. From here push **TIMER 3** (Button 3) to go to the next screen.

```

>TIMERS<
TIMER 1 28-DAY
TIMER 2 PULSE
TIMER 3 PERCENT
    
```

**TIMER 2 CHANGE descriptions:**

- % OF SOURCE** = ???Gallon volume used to start timer
- LIMIT TIME** = ???The amount of time that the relay is activated for feed
- SOURCE** = Changes the Post Bleed Source to Bleed, Dig IN 1-5, and Timer 2

**Step 3:**

This is the Timer 3 Setup Screen. From here push **SETUP** (Button 5) then go to the next screen. \*Also, from this screen you can change the timer type assigned to Timer 3.

```

>TIMER 3 SETUP<
POST BLEED TIMER
PERCENT OF BLEED: 050%
LIMIT TIME (HH:MM): 23821 : 35
SOURCE: Bleed
SETUP *TIMER TYPE
    
```

**Step 4:**

This is the Timer 3 Change Screen. From here push **% OF BLEED** (Button 1) then go to the next screen.

```

>TIMER 3 CHANGE<
% OF BLEED
LIMIT TIME
SOURCE
    
```