

Pulse Timer Setup

Step 1:

Push the **SET UP RUN** button to get this screen. From here push **TIMERS** (Button 3) to go to the next screen.

```

>HOME SETUP<
SETPOINTS          DATE/TIME
CALIBRATION        CONFIGURE
TIMERS             HISTORY
CUSTOMIZE          WATER METER
ALARMS             RELAYS
    
```

Step 5:

Set Accumulate Volume Start Timer by using the number keys. Press **ENTER** to accept and continue and **HOME** to finish. The Accumulate, Run Time, and Meter Input can be changed with similar steps.

```

>TIMER 2 CHANGE<
VOLUME TO START TIMER
(001000)
[ _ ] GALLONS
USE NUMBER KEYS TO CHANGE, PRESS
ENTER TO ACCEPT, BACK TO ERASE
    
```

Step 2:

This is the Timers Setup Screen. From here push **TIMER 2** (Button 2) to go to the next screen.

```

>TIMERS<
TIMER 1 28-DAY
TIMER 2 PULSE
TIMER 3 PERCENT
    
```

TIMER 2 CHANGE descriptions:

ACCUMULATE = Gallon volume used to start timer

RUN TIME = ???The amount of time that the relay is activated for feed

METER INPUT = Changes the Meter Input to Meter 1, Meter 2, or Meter 1 + Meter 2

Step 3:

This is the Timer 2 Setup Screen. From here push **SETUP** (Button 5) then go to the next screen. *Also, from this screen you can change the timer type assigned to Timer 2.

```

>TIMER 2 SETUP<
PULSE TIMER
ACCUMULATE: 1000 GALLONS
INPUT: WATER METER 1
RUN TIME (MM:SS): 01:00
CURRENT TOTAL: 0.0 GALLONS
OVER RUN COUNT: 0
SETUP *TIMER TYPE
    
```

Step 4:

This is the Timer 2 Change Screen. From here push **ACCUMULATE** (Button 1) then go to the next screen.

```

>TIMER 2 CHANGE<
ACCUMULATE
RUN TIME
METER INPUT
    
```