

Series 100 Controller



Installation *Maintenance* *Repair* *Manual*

Advantage Controls
4700 Harold-Abitz Dr.
Muskogee, OK 74403
Phone: 800-743-7431
Fax: 888-686-6212
www.advantagecontrols.com
email: support@advantagecontrols.com

10/2024

Series 100 Controller Manual

Table of Contents


Contents	Page
I. Introduction.....	3
II. Model Building and General Specifications.....	3
III. Installation.....	4
Power Wiring.....	4
Terminal Strip and Jumper Diagram.....	4
Pump and Valve Relay Outputs.....	4
RO Pump Wiring.....	4
Inlet and Flush Valve Wiring.....	4
TDS Cell Installation and Wiring.....	4
Switch Inputs.....	5
Pressure Fault Switch.....	5
Pretreat Switch.....	5
IV. Front Panel Description.....	6
V. System Operation.....	7
Display and Status Indicators.....	7
RO Start Delay.....	7
Pressure Fault.....	7
PF Auto Reset / PF Retry.....	8
Tank Full.....	8
Pretreat Lockout.....	8
Membrane Flush.....	8
Water Quality Display.....	9
Water Quality Setpoint.....	9
Calibration.....	9
VI. Advantage Controls Limited Warranty.....	10

I. Introduction

The Advantage Controls Series 100 RO controller is a state of the art control system for commercial and industrial reverse osmosis systems. The S100 is a microprocessor-controlled system that can monitor pressure and level switches. A TDS monitor/controller with adjustable limit is an integral part of the unit. The S100 displays system status and sensor and switch input status using a status LED and a 3-digit LED display.

II. Model Building and General Specifications

Build a Model

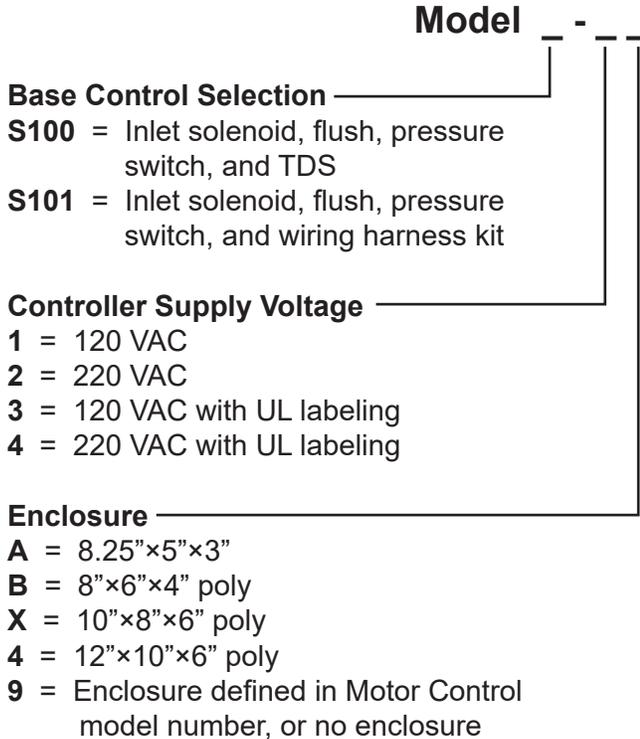

Specifications

Power

120 VAC or 240 VAC - 15+10%, 50/60Hz

Enclosure

8.25"x5"x3" ABS plastic

Environment

-22°F (-30°C) to 140°F (60°C), 0-95%RH, Non-condensing

Display

3-digit red LED

Conductivity Scale

0-1,000 PPM

Front Panel

Overlay with LED window, status LED, water quality LED, power and setpoint switches

Switch Inputs, Dry Contact:

- Pressure fault
- Pretreat lockout
- Tank full

Relay Outputs

- **Inlet solenoid valve relay:** 120/240 VAC 5 amp maximum
- **RO pump relay:** 120/240 VAC 1HP, single phase maximum
- **Flush solenoid valve relay:** 120/240 VAC 5 amp maximum

Relays supply same output voltage as board power (120 or 240 VAC) 20A maximum total load for all outputs.

passes over the cell and no air can be trapped around the cell. The cell is connected with 5 wires to terminal strip P3. Connect each colored wire to the terminal labeled with the same color.

Switch Inputs

Switch inputs are connected to P2. The connections for these inputs are not polarity sensitive and can be connected to either terminal. The switch inputs should be dry contact closures only.



WARNING: Applying voltage to these terminals will damage the controller. The switches can be either normally open or normally closed, but all switches must be the same. If the controller is set for normally open switches, all switches must be open for the unit to run. If the controller is set for normally closed switches, all switches must be closed for the unit to run.

NOTE: J10 selects normally open or normally closed operation. When J10 is in the A position, the unit is configured for normally open switches. When J10 is in the B position, the unit is configured for normally closed switches.

Pressure Fault Switch

On systems where a low feed pressure shut down is required, a feed pressure switch can be connected to the pressure fault input of P2. If a high pump pressure shut down is required, a high pressure switch can be connected to this input. If both low feed pressure and high pump pressure shut down are required, both switches can be connected to this input. Both switches must be either normally open or normally closed to operate properly.

Pretreat Switch

In systems with pretreatment, a pretreat lockout switch can be connected to the pretreat input of P2. This switch should operate when the pretreatment device is out of service.


NOTE: The output from the pretreatment device must be a dry contact and must not supply voltage.

Tank Full Switch

Connecting a tank full switch to the tank full input of P2 can cause the unit to shut down for a tank full condition. J9 selects a short or long tank full restart.

 CAUTION 
1. There are live circuits inside the controller even when the power switch on the front panel is in the OFF position. Never open the front panel without first disconnecting power from the outlet. Prewired controllers are supplied with an 8 foot, 18 AWG power cord with USA style plug. A #1 Phillips driver is required to open the front panel.
2. Low voltage signal wires (probes, flow switch, water meter, etc.) should never be run in conduit with high voltage (like 115VAC) wires.
3. Never attempt to land connections to the controller without first disconnecting power from the outlet.
4. Do not block access to disconnect power during mounting and installation.
5. The controller should be connected to its own isolated circuit breaker, and for best results, the ground should be a true earth ground, not shared. Any attempt to bypass the grounding will compromise the safety of users and property.
6. The electrical installation of the controller must be performed by trained personnel only and conform to all applicable National, State and Local codes.
7. Operation of this product in a manner not specified by the manufacturer may result in damage to equipment or persons.
8. Avoid mounting in locations that expose the controller to direct sunlight, vapors, vibration, liquid spills or extreme temperatures; less than 0°F (-17.8°C) or greater than 120°F (50°C). EMI(electromagnetic interference) from radio transmissions and electric motors can also cause damage or interference and should be avoided.

IV. Front Panel Description

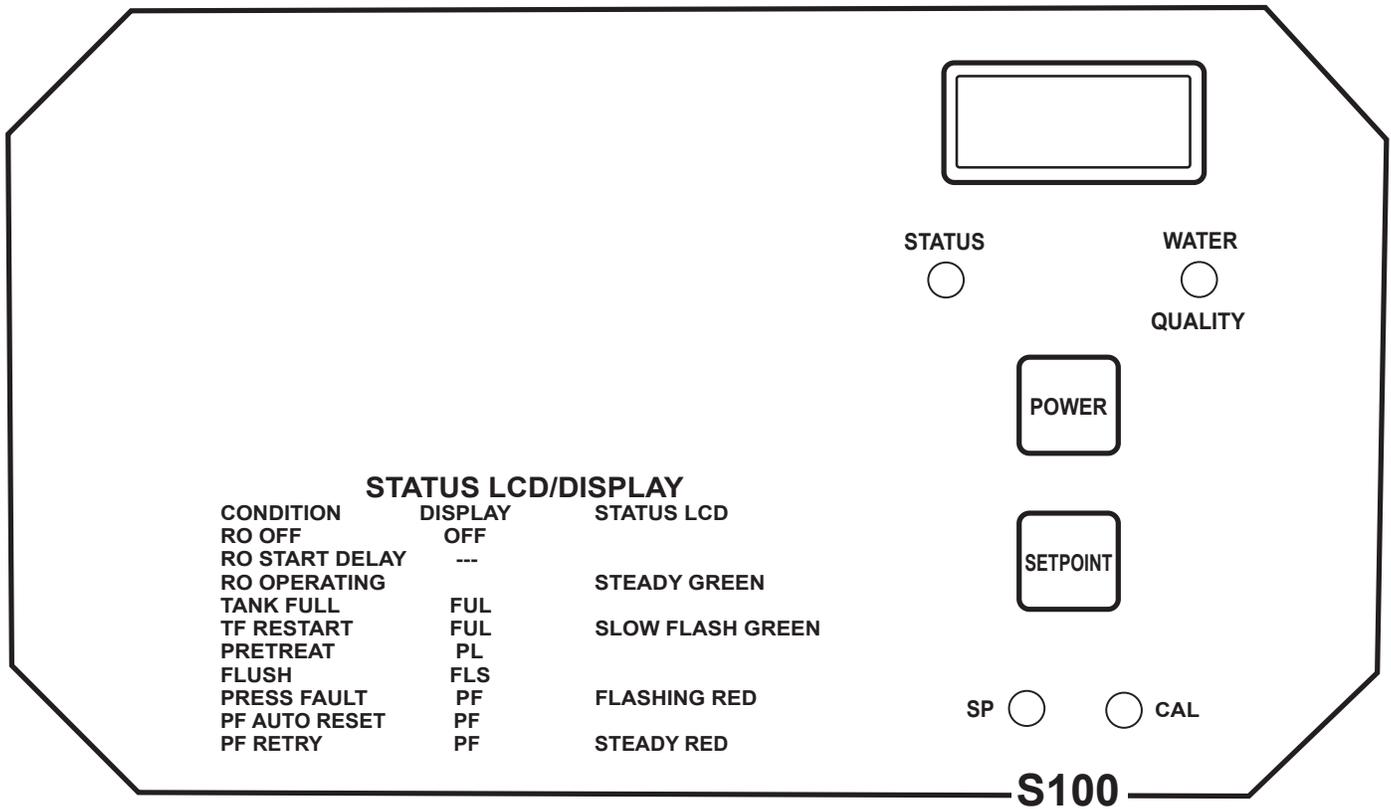

- LED DISPLAY - Shows status of system and water quality.
- STATUS LED - Shows operating status of unit.
- WATER QUALITY LED - GREEN if OK, RED if above limit.
- POWER KEY - Places controller in operating or standby mode.
- SETPOINT KEY - Places display in mode to display current setpoint.
- SP - Setpoint adjustment screw.
- CAL - Calibration adjustment screw.

V. System Operation

Operation

The S100 has 2 modes of operation, a standby mode and an operating mode. In the standby mode, the unit is effectively off. All outputs are turned off and the display shows OFF. In the operating mode, the unit operates automatically. All inputs are monitored and the outputs are controlled accordingly. Pressing the Power key will toggle the unit from standby to operate or from operate to standby. If power is removed from the unit, when power is reapplied, the unit will restart in the mode it was in when power was removed.

Display and Status Indicators

The display is a 3 digit display. System operating status, the TDS reading and the TDS setpoint are shown on this display. A red/green LED indicates the system status in conjunction with the display.

CONDITION	DISPLAY	STATUS LED
RO OFF	OFF	
RO START DELAY	- - -	
RO OPERATING		STEADY GREEN
TANK FULL	FUL	
TANK FULL RESTART	FUL	SLOW FLASH GREEN
PRETREAT LOCKOUT	PL	
FLUSH	FLS	
PRESSURE FAULT	PF	FLASHING RED
PF AUTO RESET	PF	
PF AUTO RETRY	PF	STEADY RED

RO Start Delay

When the controller is placed in the operating mode or restarts from a shut down condition, the inlet valve will open and a 5 second time delay will start. During the delay, - - - will show on the water quality display. After this delay, the RO pump will start. The water quality display will now show the current water quality. The status lamp will show steady green.

Pressure Fault

If the pressure fault input is active for 2 seconds, a pressure fault condition will occur. This will cause the controller to shut down. PF will show on the water quality display and the status lamp will flash red. To clear the pressure fault, press the power key twice.

PF Auto Reset / PR Retry

With J8 in the A position, the power must be cycled using the Power key to clear a pressure fault shut down. A PF auto reset function is enabled by placing J8 in the B position. When a pressure fault occurs with the PF auto reset enabled, the controller will automatically reset after a 60 minute delay and the controller will start. If the pressure fault has cleared, the controller will continue to run. If the pressure fault condition is still active, the controller will again shut down for the pressure fault condition and the auto reset cycle will repeat. During the auto reset delay, the water quality display will show PF and the status lamp will be off.

A PF retry function is enabled by placing J8 in the C position. When a pressure fault occurs with the PF retry enabled, the controller will shut down for 30 seconds and then attempt to restart. If the pressure fault is still active, the controller will shut down for 5 minutes and then attempt to restart. If the pressure fault is still active, the controller will shut down for 30 minutes and attempt to restart. If the pressure fault is still active, the controller will lockout for the pressure fault. During the retry delays, the water quality display will show PF and the status lamp will be a steady red. If during one of the retries, the controller is able to start and run continuously for 10 seconds, the retry function is reset. If a pressure fault occurs, the PF retry cycle will repeat from the beginning.

When J8 is in the D position, both the PF auto reset AND the PF retry functions are enabled. If a pressure fault condition occurs, the PF retry function will operate as described above. If the retry function locks out, the PF auto reset function will operate as described above. The PF retry and PF auto reset functions will continue

Tank Full

If the tank full input is active for 5 seconds, the controller will shut down for a tank full condition. The water quality display will show FUL. When the tank full condition clears, the unit will restart after the selected restart delay. The delay is selected with J9. With J9 in the A position, the restart delay is 2 seconds. With J9 in the B position, the restart delay is 15 minutes. Position A is normally used with tank level switches that have a large span. During the restart time, the status lamp will flash green.

Pretreat Lockout

If the pretreat lockout input is active for 2 seconds, the controller will shut down for a pretreat lockout condition. The water quality display will show PL. When the pretreat lockout condition clears, the unit will restart.

Membrane Flush

A flush function can be enabled using J11 and J12. When a flush is initiated, the flush valve will operate and the flush will last 5 minutes. The flush can occur when a tank full condition occurs or every 24 hours, depending on the jumper settings. The inlet valve can be open or closed and the RO pump can be on or off, depending on the jumper settings.

J11	J12	FLUSH TYPE	INLET	RO PUMP
A	A	NONE		
A	B	TANK FULL	OPEN	ON
A	C	TANK FULL	CLOSED	ON
B	A	TANK FULL	OPEN	OFF
B	B	TANK FULL	CLOSED	OFF
B	C	24 HOUR	OPEN	ON
C	A	24 HOUR	CLOSED	ON
C	B	24 HOUR	OPEN	OFF
C	C	24 HOUR	CLOSED	OFF

Water Quality Display

The water quality display shows the current water quality when the controller is operating normally and status messages when the controller is shut down. The water quality display is 0-999 PPM. If the water quality is above 999, the display will show ^ ^ ^. If the water quality is below the setpoint, the water quality lamp will be green. If the water quality is above the setpoint, the water quality lamp will be red.

Water Quality Setpoint

The water quality setpoint can be adjusted from 0-999. If set to 999, the water quality lamp will always remain green. To set the water quality setpoint, press the Setpoint key. The display will alternate between the setpoint and SP. Use a small screwdriver to adjust the SP adjustment to the desired setpoint value. Press the Setpoint key to return the display to the water quality display.

Calibration

To adjust the calibration of the water quality, measure the water with a meter calibrated to a known standard. Using a small screwdriver, adjust the CAL adjustment to get the correct reading on the display.

VI. Advantage Controls Limited Warranty

What the warranty covers:

Advantage Controls warrants the controllers to be free from defects in materials and workmanship during the warranty period. If a product proves to be defective during the warranty period, Advantage controls will repair the unit.

How long the warranty is effective:

The warranty is for one year, and starts the day the product leaves our facility

What the warranty does not cover:

1. Damage, deterioration, or malfunction resulting from:
 - a. Accident misuse, neglect, fire, water lightning or other acts of nature, unauthorized product modification or failure to follow instructions supplied with the product.
 - b. Repair or attempted repair by anyone not authorized by Advantage Controls.
 - c. Any damage of the product due to shipment.
 - d. Causes external to the product such as electric power fluctuations.
 - e. Use of supplies or parts not meeting Advantage Controls' specifications.
 - f. Normal wear and tear.
 - g. Any other cause which does not relate to a product defect.
2. Transportation costs necessary to obtain service under this warranty.
3. Labor other than factory labor.

How to get service:

1. To obtain warranty service, contact Advantage Controls for a Return Material Authorization (RMA).
2. You will be required to provide:
 - a. Your name and address
 - b. A description of the problem
3. Package the controller carefully for shipment and return it to Advantage Controls

Limitation of implied warranties:

There are no warranties, expressed or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

Exclusion of damages:

Advantage Controls' liability is limited to the cost of repair or replacement of the product. Advantage Controls shall not be liable for:

1. Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships or other commercial loss, even if advised of the possibility or such damages.
2. Any other damages, whether incidental, consequential, or otherwise.
3. Any claim against the customer by any other party.

- Notes -

Get the Advantage in Water Treatment Equipment

Advantage Controls can give you the *Advantage* in products, knowledge and support on all of your water treatment equipment needs.

- Cooling Tower Controllers
- Boiler Blow Down Controllers
- Blow Down Valve Packages
- Bleed Valves
- Water Meters
- Metering Pumps
- Corrosion Coupon Racks
- Solution Tanks
- Solid Feed Systems
- Bypass Feeders
- Filter Equipment
- Glycol Feed Systems
- Pre-Fabricated Systems

